


MODEL: 93163CH
PACKING DIAGRAM

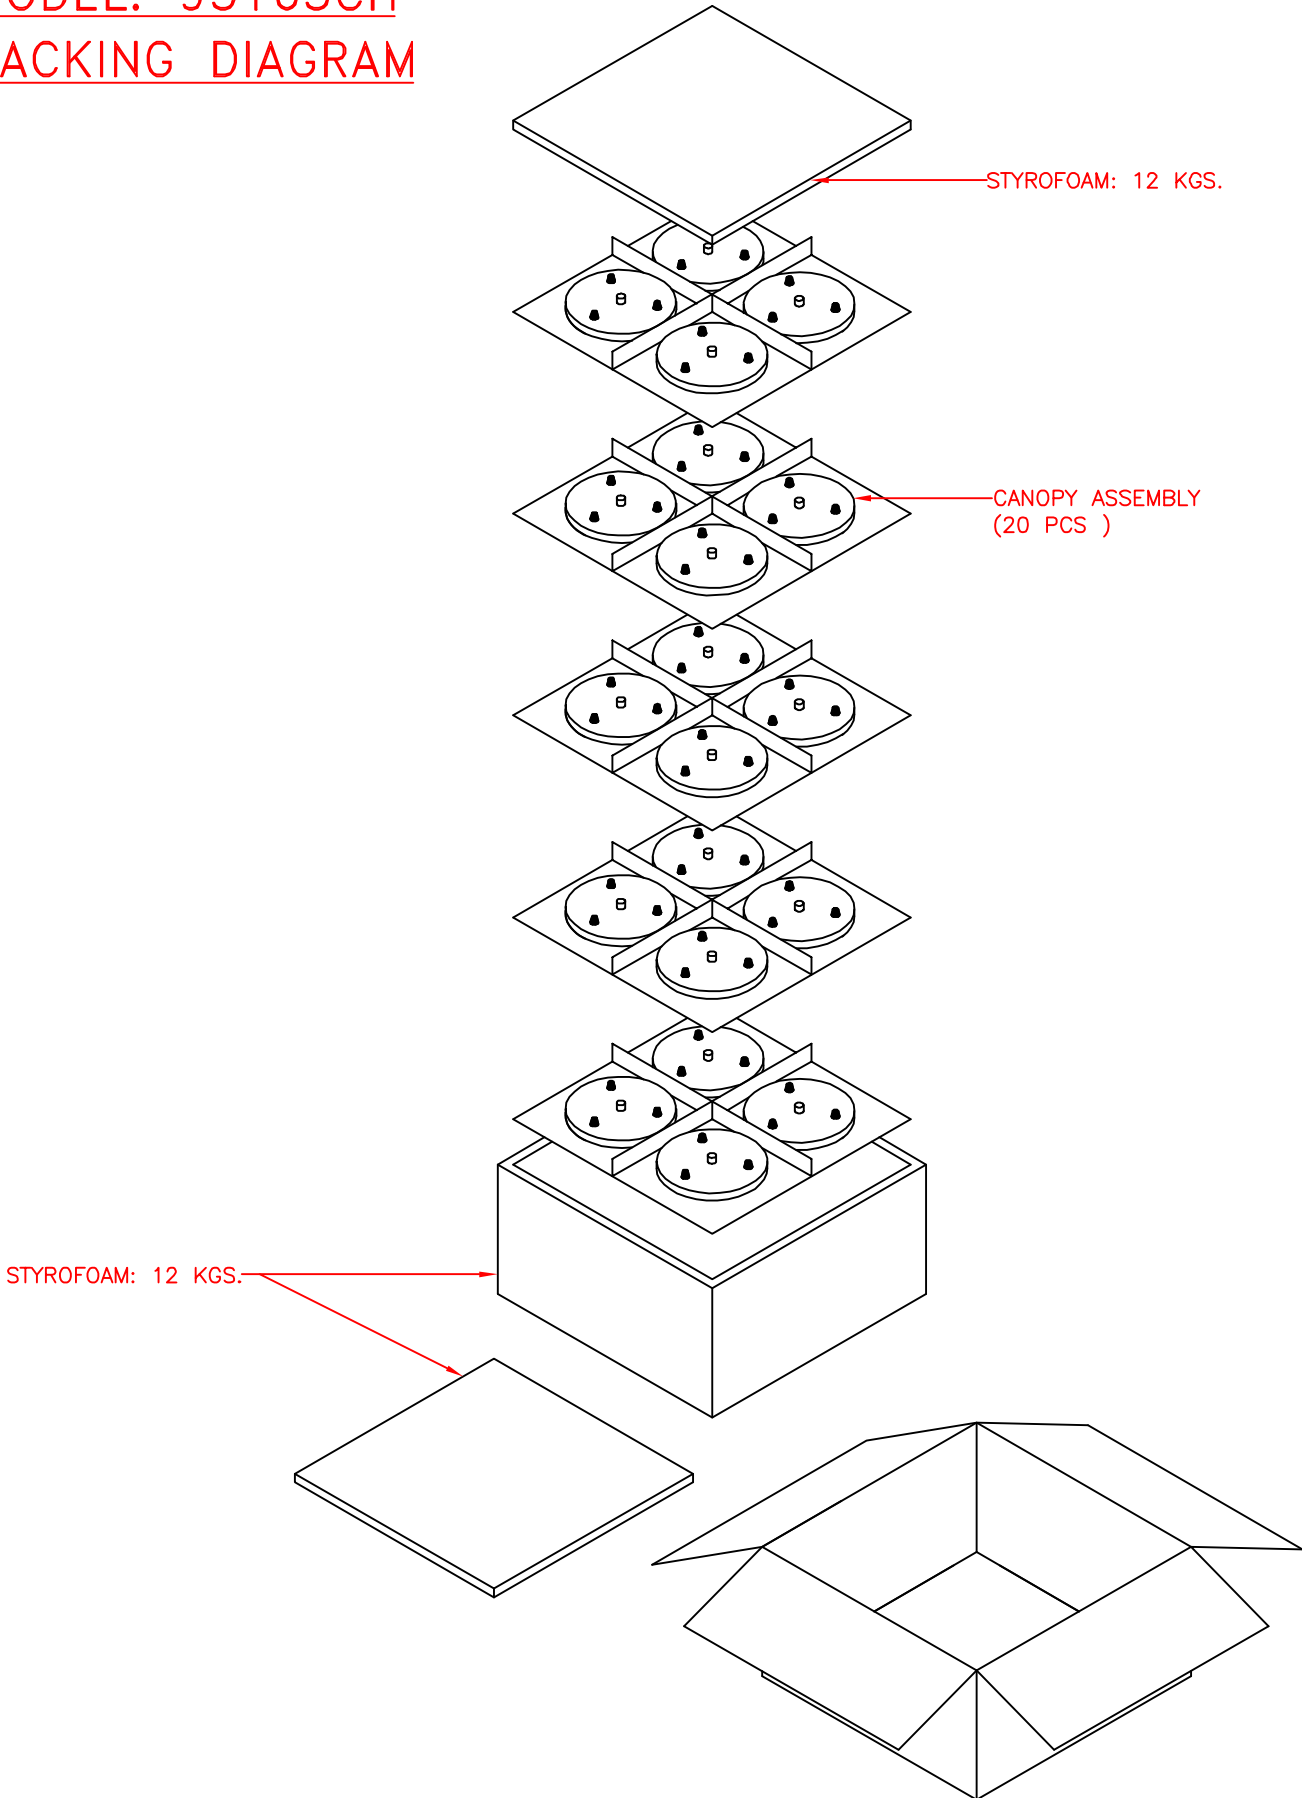

MODEL: 93163CH

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FIXTURE SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER, ADJUSTABLE WRENCH, WIRE CUTTERS.

UNPACK THE FIXTURE

YOU SHOULD HAVE RECEIVED THE FOLLOWING PART IN THE PACKAGE: CANOPY. TO PROTECT THE FINISH, PLACE THE CANOPY ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE:

CROSS BAR, NIPPLE, NUT, (2) 8-32 x 1-1/4" SCREW, GREEN GROUND SCREW, (3) WIRE CONNECTORS AND FINIAL.


NOTE: THIS CANOPY IS DESIGNED FOR HOLDING THREE CORD HANG PENDANTS (SOLD SEPARATELY). THE DIAMETER OF THESE SHADES ARE NOT MORE THAN 25.4 CM (10").


FIXTURE ASSEMBLY

1. LOOSE THE KNOB ON BOTTOM OF THE ORIGINAL CANOPY, AND THEN PULL OUT THE CORD FROM BOTTOM OF THE ORIGINAL CANOPY.
2. LOOSE THE KNOB ON BOTTOM OF THE NEW CANOPY, FEED THE CORDS THROUGH THE KNOBS AND HOLES IN THE NEW CANOPY AS SHOWN.
3. ADJUST THE CORD LENGTH, AND THEN SECURE THE CORDS TO THE NEW CANOPY BY TIGHTENING THE KNOBS.
4. CUT OFF THE CORD TO KEEP THE CORD 12" LONGER THAN THE LENGTH THAT YOU WANT.
5. SPLIT THE END OF THE POWER SUPPLY WIRE 3-1/2" FROM THE END AND STRIP THE PLASTIC COVER OFF THE WIRE ABOUT 1/2".
6. COMPLETE INSTALLATION INSTRUCTIONS ON NEXT PAGE.

FINAL ASSEMBLY

1. PLEASE LOOK THROUGH THE ORIGINAL INSTRUCTIONS FOR THESE PENDANTS TO GET THE PROPER WATTAGE AND BULB TYPE, INSTALL A PROPER BULB INTO EACH SOCKET.
2. RESTORE POWER, YOUR FIXTURE IS NOW READY FOR USE.

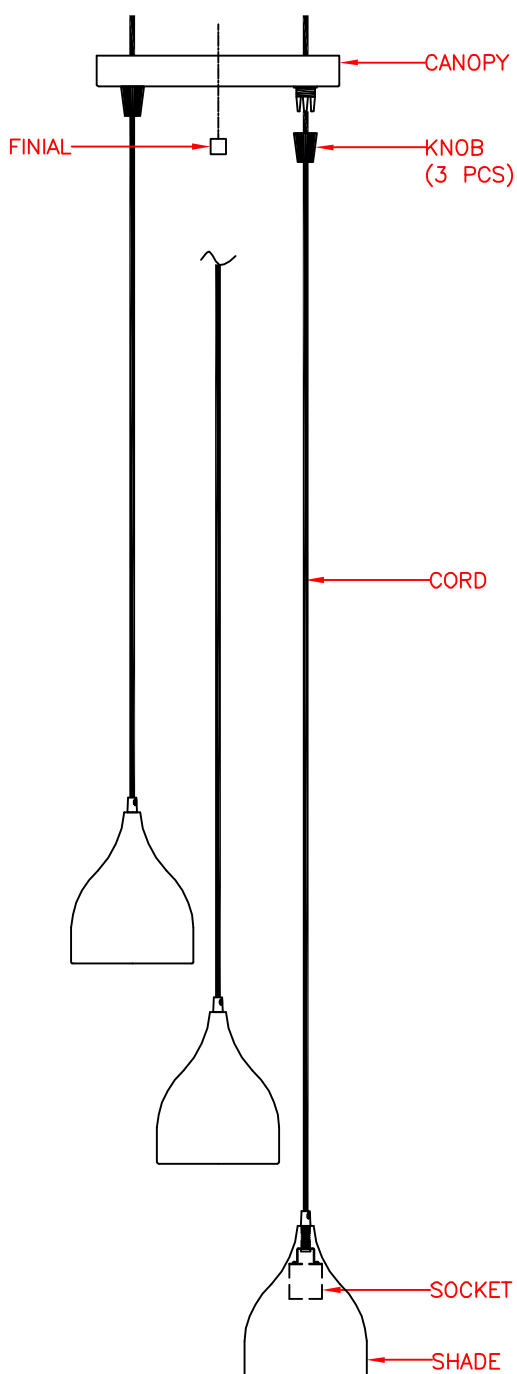

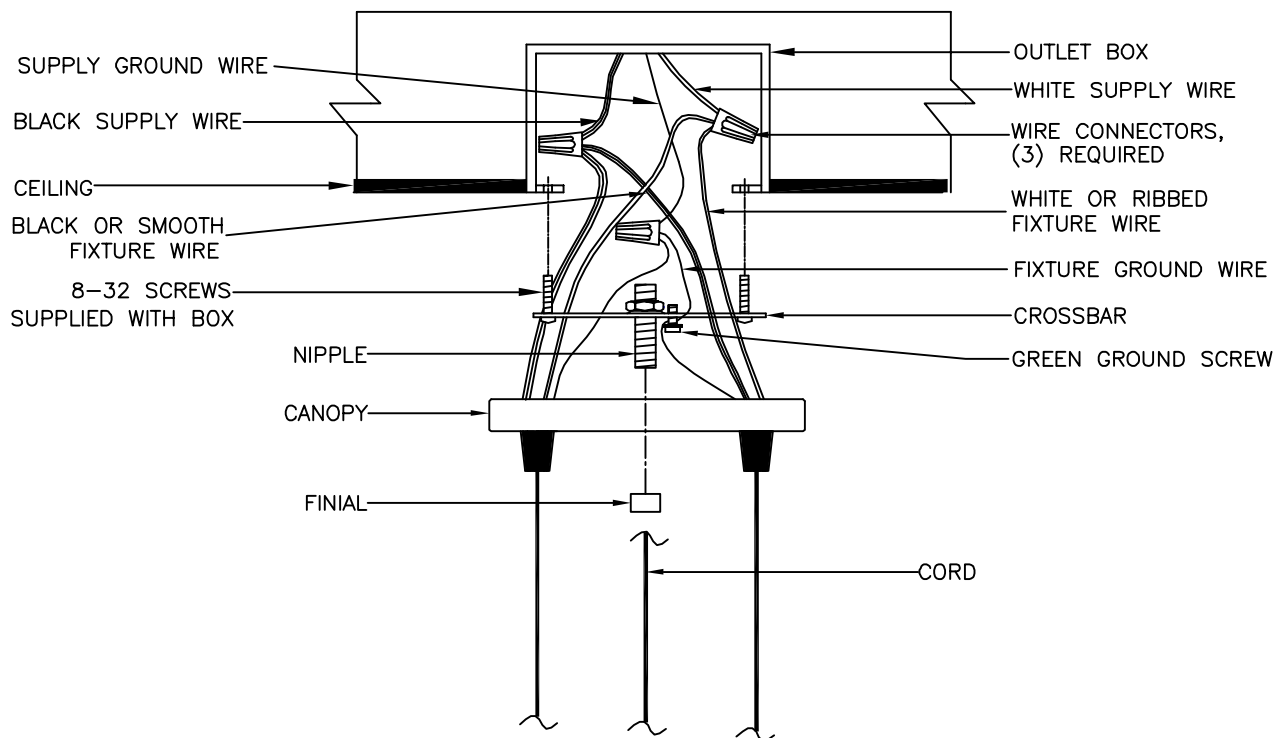

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

CAUTION: TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

** IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

*** THIS FIXTURE IS INTENDED TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE FIXTURE.

COMPLETE FIXTURE ASSEMBLY INSTRUCTIONS FIRST (SEE PREVIOUS PAGE).

1. SCREW THE NIPPLE INTO THE CROSSBAR. ATTACH THE CROSSBAR TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX.

(NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 x 1-1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).

2. CONNECT THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTORS PROVIDED. CONNECT THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE CROSSBAR THEN CONNECT THE FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTOR PROVIDED.

NOTE: IF THE COLOR OF THE CORD IS DIFFERENT FROM THE DESCRIPTION ABOVE, PLEASE LOOK THROUGH THE ORIGINAL INSTRUCTIONS FOR THESE PENDANTS TO TELL THE POLARITY OF WIRES.

3. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX. SPREAD THE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE.

4. RAISE THE FIXTURE TO THE CEILING AND SECURE IN PLACE WITH THE FINIAL.

5. SEE PREVIOUS PAGE FOR FINAL ASSEMBLY INSTRUCTIONS.

